Tempnote[®]





USER MANUAL

ΕN

Tempnote T32SU

Single-Use Temperature Data Logger


T32SU/2024




Tempnote®



tside

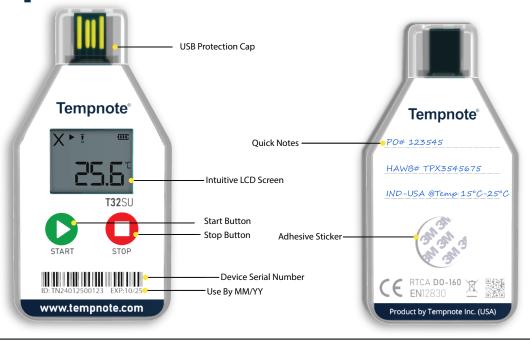

SLCD display description

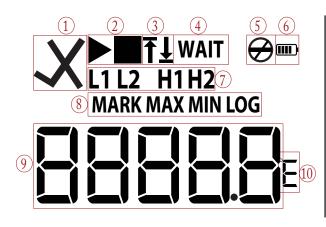

1	✓ Normal X Alarm	6	Battery Power
2	▶ In Recording Status■ Stop Recording	8	Interface Indication
3 & 7	Alarm area: † H1 H2 (High Temperature Alarm) L1 L2 (Low Temperature Alarm)	9	Temperature Value
4	WAIT Start Delay Status	10	Temperature Unit
5	Stop button disable		

Technical Specifications

Recording Option	Single Use	
Temperature Range	-30°C to +70°C	
Temperature Accuracy	± 0.5 °C (-30°C to +70°C)	
Temperature Resolution	0.1°C	
Data Storage Capacity	32,000 Readings	
Shelf Life / Battery	2 Years	
Recording Interval	User Configurable (10 seconds to 18 hours)	
Recording Duration	300 + Days (Customizable)	
Startup Mode	Button Start or Timed Start	
Protection Level	IP65	
Product Size	96 mm x 49 mm x 7.5 mm	
Product Weight	25g	

Certifications	EN12830, CE, RoHS	
Validation Certificate	Hardcopy in Package	
Report Generation	Plug-N-Play	
Report Format	Auto, PDF and CSV	
Password Protection	Optional on request	
Connection Interface	USB 2.0 Interface	
Alarm Configuration	High and Low Alarm	
Reprogrammable	Tempnote Analyzer Software	
Accessories Incl.	Shipping Documents	
	Calibration Certificate	
Please visit www.tempnote.com to download		

Please visit www.tempnote.com to download Calibration Certificate online.

Tempnote®



Operation Instructions

1

START

LONG PRESS START BUTTON FOR 3 SECONDS

Keep start button long pressed for minimum 3 seconds to start recording. Then display will show or **WAIT** which indicates a successful starting.



2

STOP

LONG PRESS STOP BUTTON FOR 3 SECONDS

Keep stop button pressed for minimum for 3 seconds to stop recording. Then display will show ■ which indicates a successful stopping.





REPORT

PLUG LOGGER'S USB TO COMPUTER USB PORT

Remove plastic cap and plug the logger to USB port of computer. PDF + CSV report will be autogenerated which can be found in the device's folder.



(2) Operation Indication

Start / Stop

Status	Action	Display Confirmation
Start Logger	3 secLong Pressing ▶ button	Display will show ▶or WAIT
Stop Logger	3 secLong Pressing ■ button	Display will show ■

Status Request by pushing Start Button 1 time

Start / Stop

Status	Action	Display Confirmation	
Not Started	Push > Start Button 1 Time	Temperature + 때	
Recording	Push > Start Button 1 Time	Temperature + IIII +	
Stopped	Push > Start Button 1 Time	Temperature + IIII +	

Tempnote®



1. Press start button 1 time, Logger is in idle condition.



2. T32SU is in recording mode and it is within pre-set temprature limits.



3. T32SU is recording and it has crossed upper and lower temprature limits.



4. T32SU has been stopped and ■ is showing on display.



5. T32SU is started successfully and it is in start delay period. WAIT symbol can be seen on a display.(If Stop button is disable then this ⊕ symbol can be seen on display)



Factory default parameters of device

Project	Parameters	
Temperature Unit	°C	
Temperature Alarm Limit	-30°C to +70°C	
Alarm Delay	10 Minutes	
Recording Interval	15 Minutes	
Start Delay	0 Minutes	
Equipment Time	UTC +5:30	
LCD Display Time	1 Minute	
Start Mode	Press Button To Start	

To change default parameters download Tempnote Software from www.tempnote.com